

TWA


IN FLIGHT




$\frac{1}{4}$ " scan or $\frac{1}{2}$ " scan

1:50

1:20

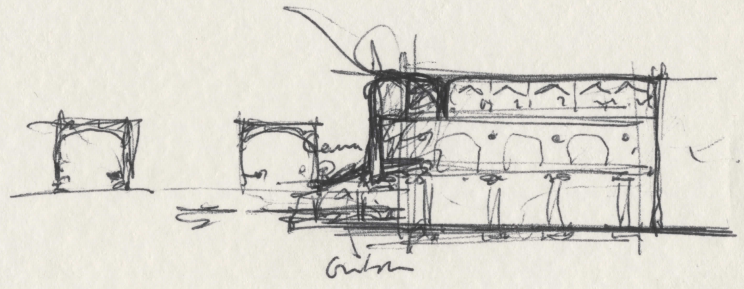




14 meters
16 meters 14

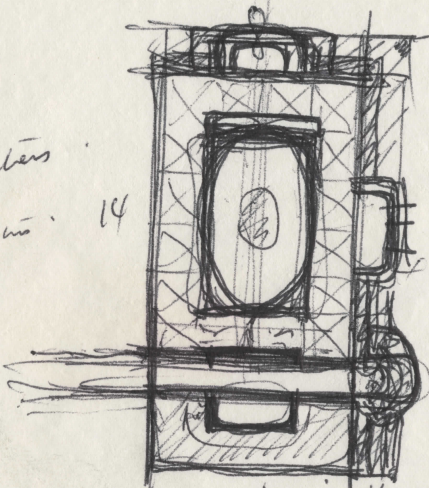



clutchers place

keper inside





$\frac{1}{3}$ meter
fur

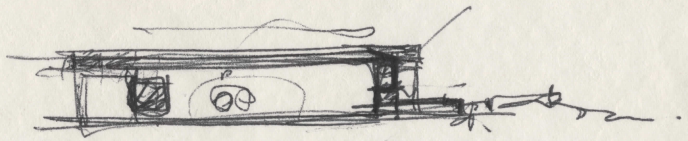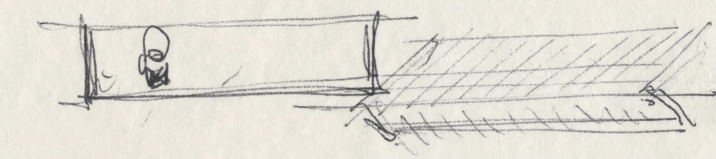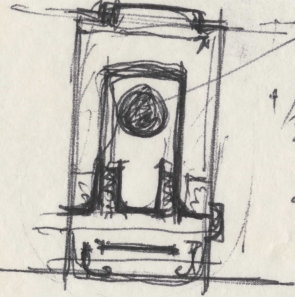

keper

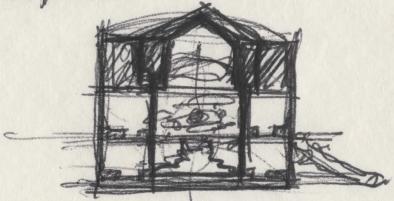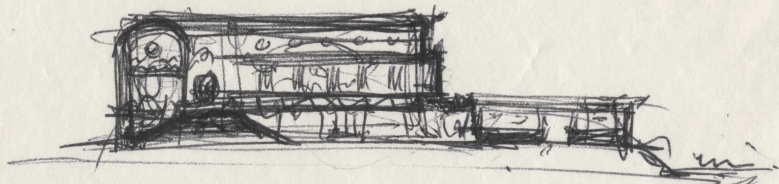

- o fence
- o porch
- o bay window → double
- o window at end

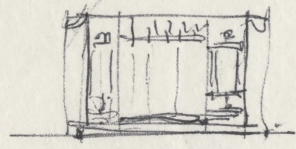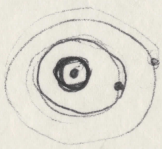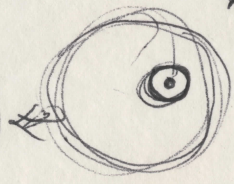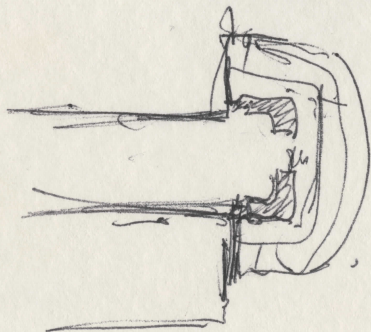

TWA

IN FLIGHT

